


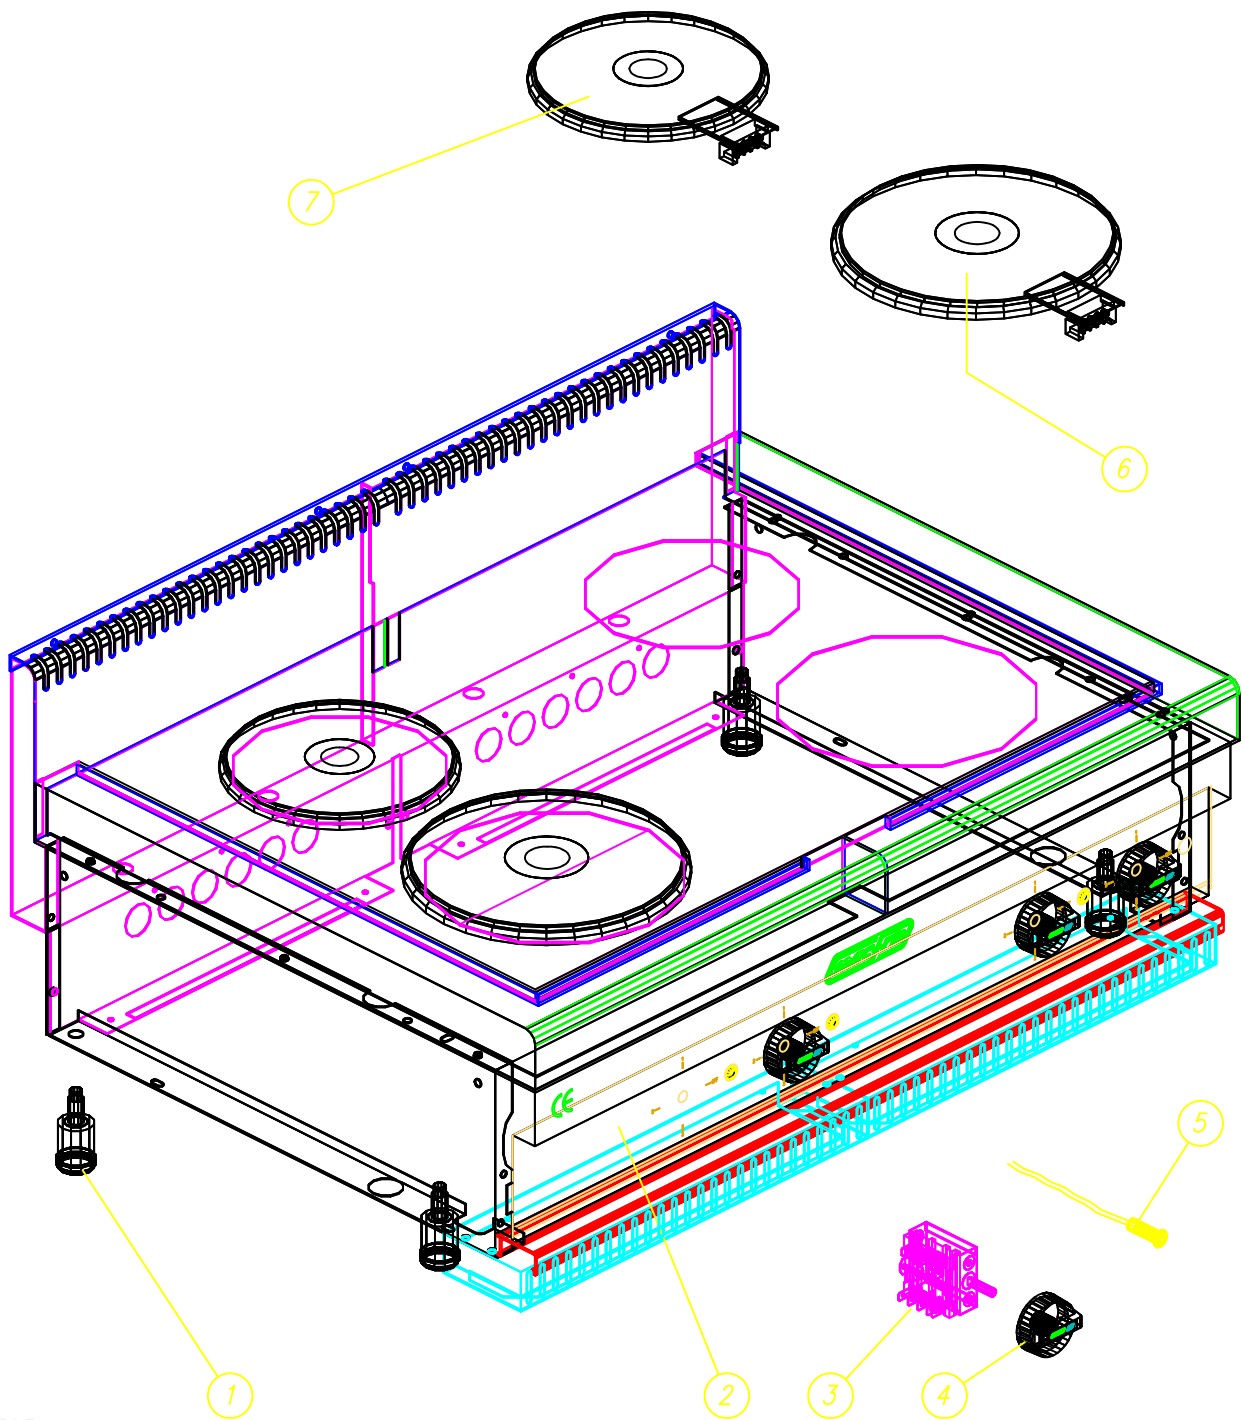

Mod. 3031

N°	CODIGO	DESCRIPCION
1	603800	PATA SNACK
2	638600	CARATULA MANDOS POLICARBONATO
3	321800	CONMUTADOR
4	318500	MANDO CONMUTADOR
5	201400	PILOTO INDICADOR ROJO
6	323500	PLACA ELECTRICA 2.600 W
7	321600	PLACA ELECTRICA 2.000 W

HORNILLO SNACK – RECHAUD SNACK – SNACK SMALL COOKERS

Mod. 3024–3031–3310